

User information:

Installers do not remove.

Periodically inspect mechanisms for loose, broken, or missing parts.
If any missing parts or loose or broken mechanisms are found, remove the chair from use until repairs are made using factory-authorized parts.

Lamex


Adjustment Guide Video



Youku
Bilingual Version



Youtube
English Version

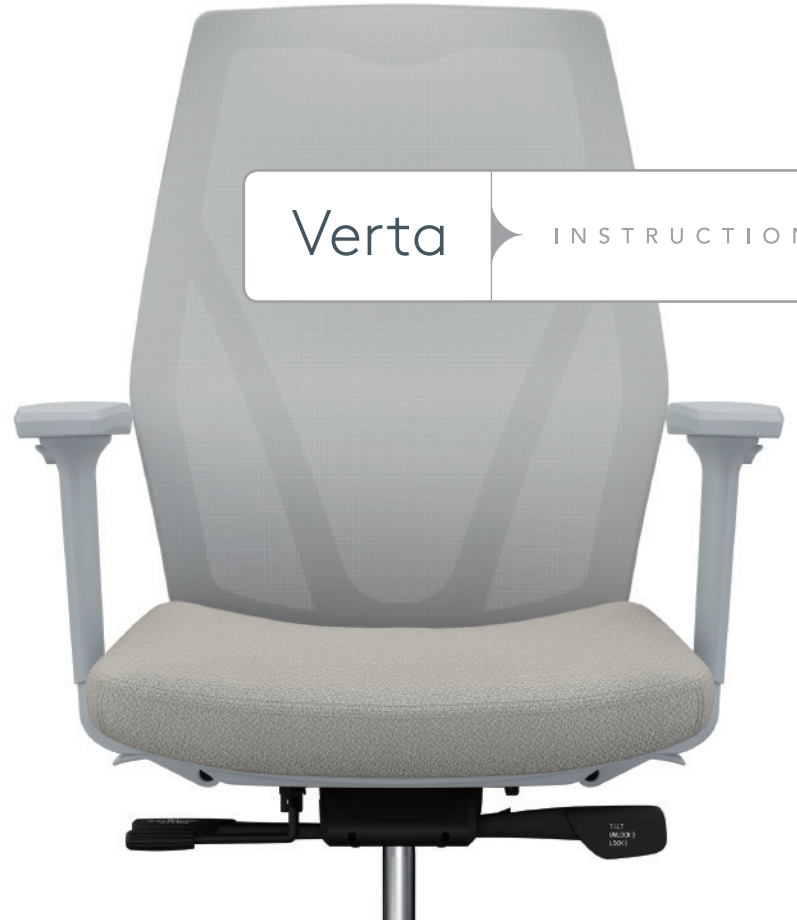

Verta

Use these easy adjustments to optimize ergonomics and comfort.

Headrest Adjustment

Headrest can be rotated or adjusted up and down to your desired position.

2D/4D Armrest

To adjust armrest height, press the button under the arm pad to lift or lower arm height to desired position. Then, release button to lock into place. To adjust armrest angle, pivot or slide arm pad forward or backward. To adjust armrest width, press lock lever at the bottom of the armrest and release to lock position.

Weight Activated Synchronized Mechanism

Verta finds an ideal support balance by sensing your body weight, adjusting recline tension and back-and-forth motions accordingly.

Tilt Lock

The tilt level is located at the bottom left of the seat. Slide tilt level backward to your preferred reclining position, then slide forward to lock into position. Slide tilt lever and push back to release the lock.



Lumbar Support

Lumbar adjustment provides support for your back. Adjust lumbar pad up or down to your desired position.

Seat Depth Adjustment

To adjust seat depth, press the lever under the seat and slide forward or backward. Release lever to lock seat depth to your desired position.

Seat Height Adjustment

To raise the seat, lift your weight off and pull up on the lever. To lower seat, lift up on the lever while you are seated. Release lever when seat reaches desired height.

Certifications



GREENGUARD GOLD
Indoor Air Quality Certification