

Extraordinary Seating 位致非凡



Lamex

www.lamex.com

Shanghai 上海
8/F, Greentech Tower, No. 436 Hengfeng Road,
Jingan District, Shanghai
上海市静安区恒丰路436号环智国际大厦8层
Postal Code 邮政编码: 200070
Tel 电话: (86) 21 6278 8888

Beijing 北京
Room B15-1, B15-2, B15-3, 15/F, Building B,
Guanghualu SOHO II, No. 9 Guanghua Road,
Chaoyang District, Beijing 100020
北京市朝阳区光华路9号光华路SOHO二期B座
15层B15-1, B15-2, B15-3室
Postal Code 邮政编码: 100020
Tel 电话: (86) 10 8521 7588

Shenzhen 深圳
Unit 01, 6/F, Tower 1, Kerry Center Qianhai,
Qianwan 1st Road, Qianhai Shenzhen-HongKong
Cooperation Zone, Nanshan District,
Shenzhen, Guangdong Province
广东省深圳市前海深港合作区南山街道前湾一路
前海嘉里商务中心T1写字楼601室
Postal Code 邮政编码: 518038
Tel 电话: (86) 769 8203 1018

Singapore
100H Pasir Panjang Road #05-03
OC@Pasir Panjang Singapore 118524
Tel : (65) 6817 8750

Dongguan 东莞
191 Huan Shi East Road, Tangxia Town,
Dongguan, Guangdong Province
广东省东莞市塘厦镇环市东路191号
Postal Code 邮政编码: 523712
Tel 电话: (86) 769 8203 1111

Guangzhou 广州
Unit 2, 22/F, Jun Lin Building, No. 285 Forest and
East Road, Tianhe District, Guangzhou,
Guangdong Province
广东省广州市天河区林和东路285号
峻林大厦22层02单元
Postal Code 邮政编码: 510610
Tel 电话: (86) 20 3892 2422

Hong Kong 香港
26/F, FOYER, 625 King's Road,
North Point, Hong Kong
香港北角英皇道625号26楼
Tel 电话: (852) 2828 6888

Service Hotline/客户服务热线
Mainland China/中国大陆: (86) 800 820 6073 / (86) 400 686 8073
Hong Kong & Asia Pacific/香港及亚太区: (852) 2828 6000

Design and specification are subjected to modification without prior notice due to continuous product improvement.
鉴于不断求进, 产品规格日后若有更改, 恕不另行通知。

Lamex

Lucido™
雅尊



① Tilt Tension 拉力调节

Turn the knob clockwise to increase tension, anticlockwise to reduce tension.

通过旋钮调节倾仰拉力强度，顺时针旋转为减少倾仰力度，逆时针旋转为增加倾仰力度。



② Seat Height Adjustment 座椅高度调节

To raise the seat, lift your weight off the seat and pull up the lever; release lever when your seat reaches desired height. To lower the seat, lift up the lever while you are seated; release lever when your seat reaches desired height.

提升座高时，身体略微离开椅座并拉起调节杆使椅座到达合适高度后松开调节杆。降低座高时，身体坐在椅座上并拉起调节杆使座高下降到合适高度。

③ Tilt Lock 倾仰锁定

A. Apply to Knee-tilting mechanism:

Flip down the lever to lock at preferred tilt. Flip up the lever to release the tilt lock.

适用于足膝平衡倾仰机关：

翻下拉杆可锁定至适宜的倾仰角度。翻上拉杆可解除倾仰锁定。

B. Apply to Central Tilting mechanism:

Push the handle inward to lock the back at an upright work position.

适用于中央平衡倾仰机关：

将控制杆向内推入可将椅背锁定在直立位置。